


Spectro



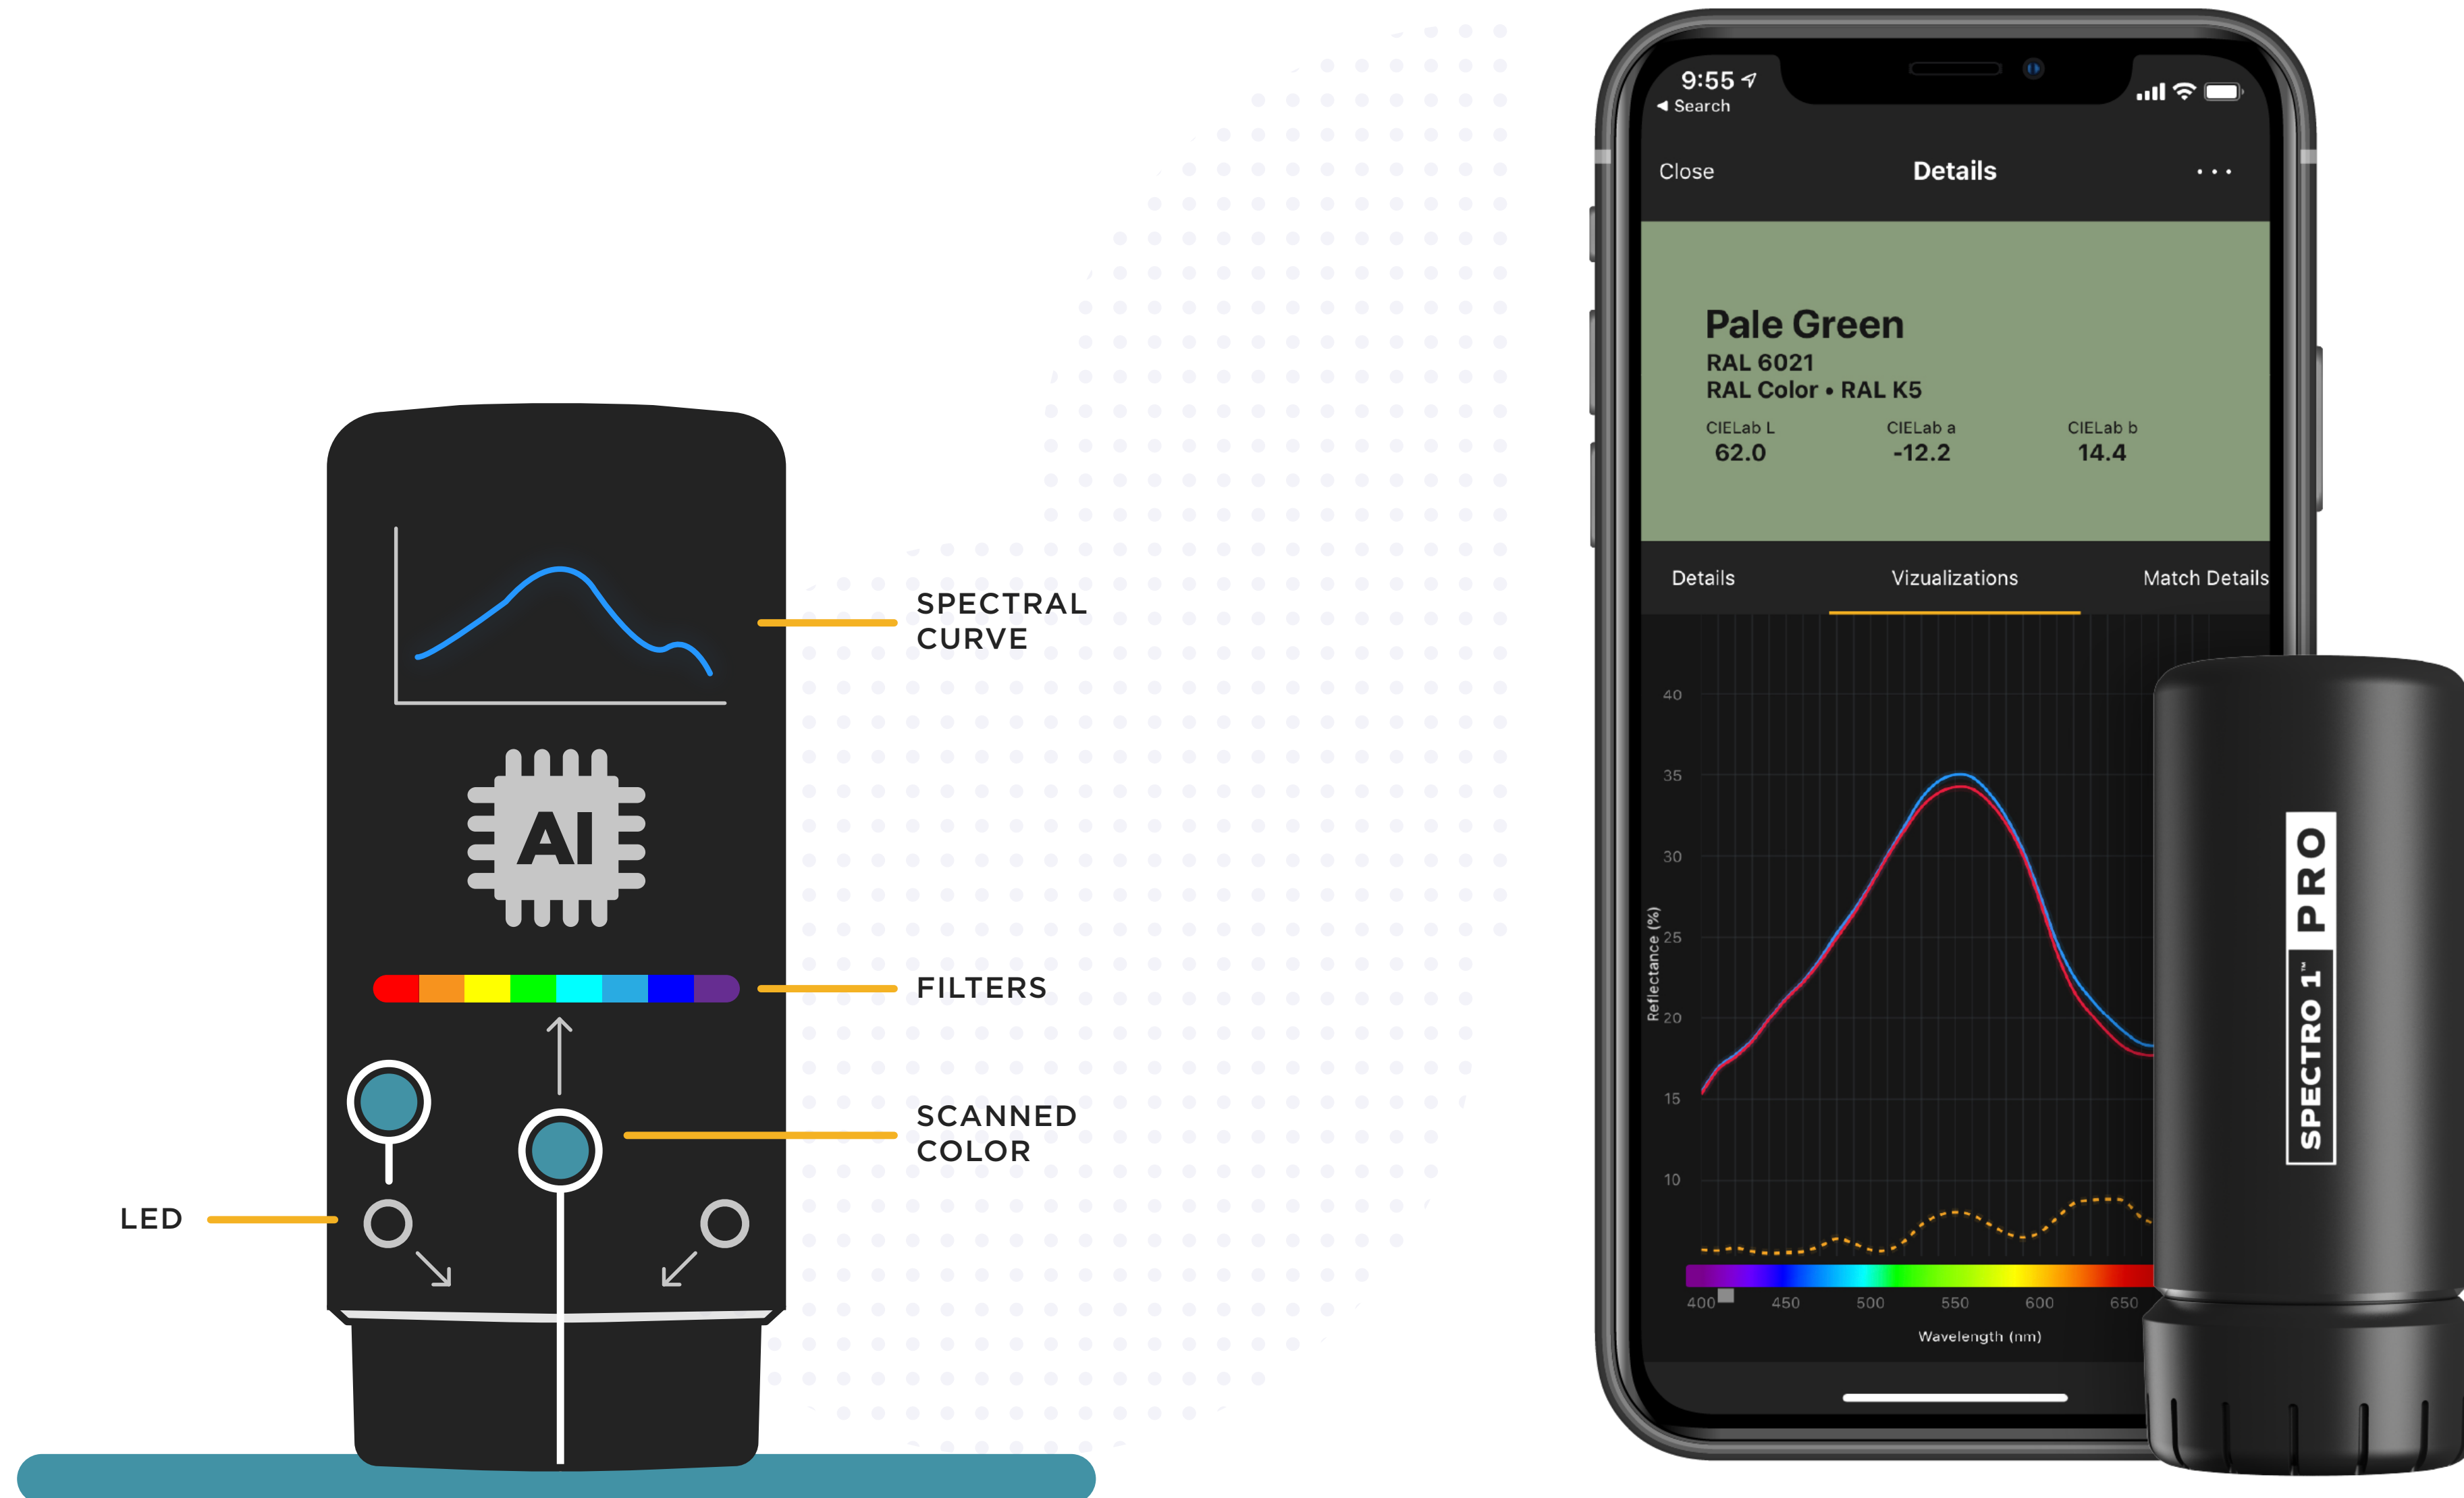

General Overview


- First ever affordable, portable, and easy-to-use spectrophotometer on the market
- Spectro 1 Pro is designed for organizations who are focused on true 'actual' color measurement
- Applications
 - In-store retail paint stores
 - Paint professionals on-the-go
 - Commercial and industrial color matching
- Traditional spectrophotometers have been cost prohibitive for widespread adoption
- A simple mobile app reduces technical knowledge requirement
- Custom color matching connected to tinting software



Technical Overview

- Professional grade color measurement device for non-metallic colors
- Bluetooth Low Energy connection to iOS & Android platforms
- 8mm measurement diameter
- Patented spectrophotometer technology
- Diffused/0°, specular included/excluded optical geometry
- Outputs reflectance curve between 400-700nm, in 10 nm increments
- Similar capabilities to current spectrophotometers priced at >\$5,000 USD
- Highly aligned to D/8° legacy databases for easy import process
- Mobile-based A.I. Formulation capabilities

Learn more: [Paint & Coatings Industry Technical Article](#)

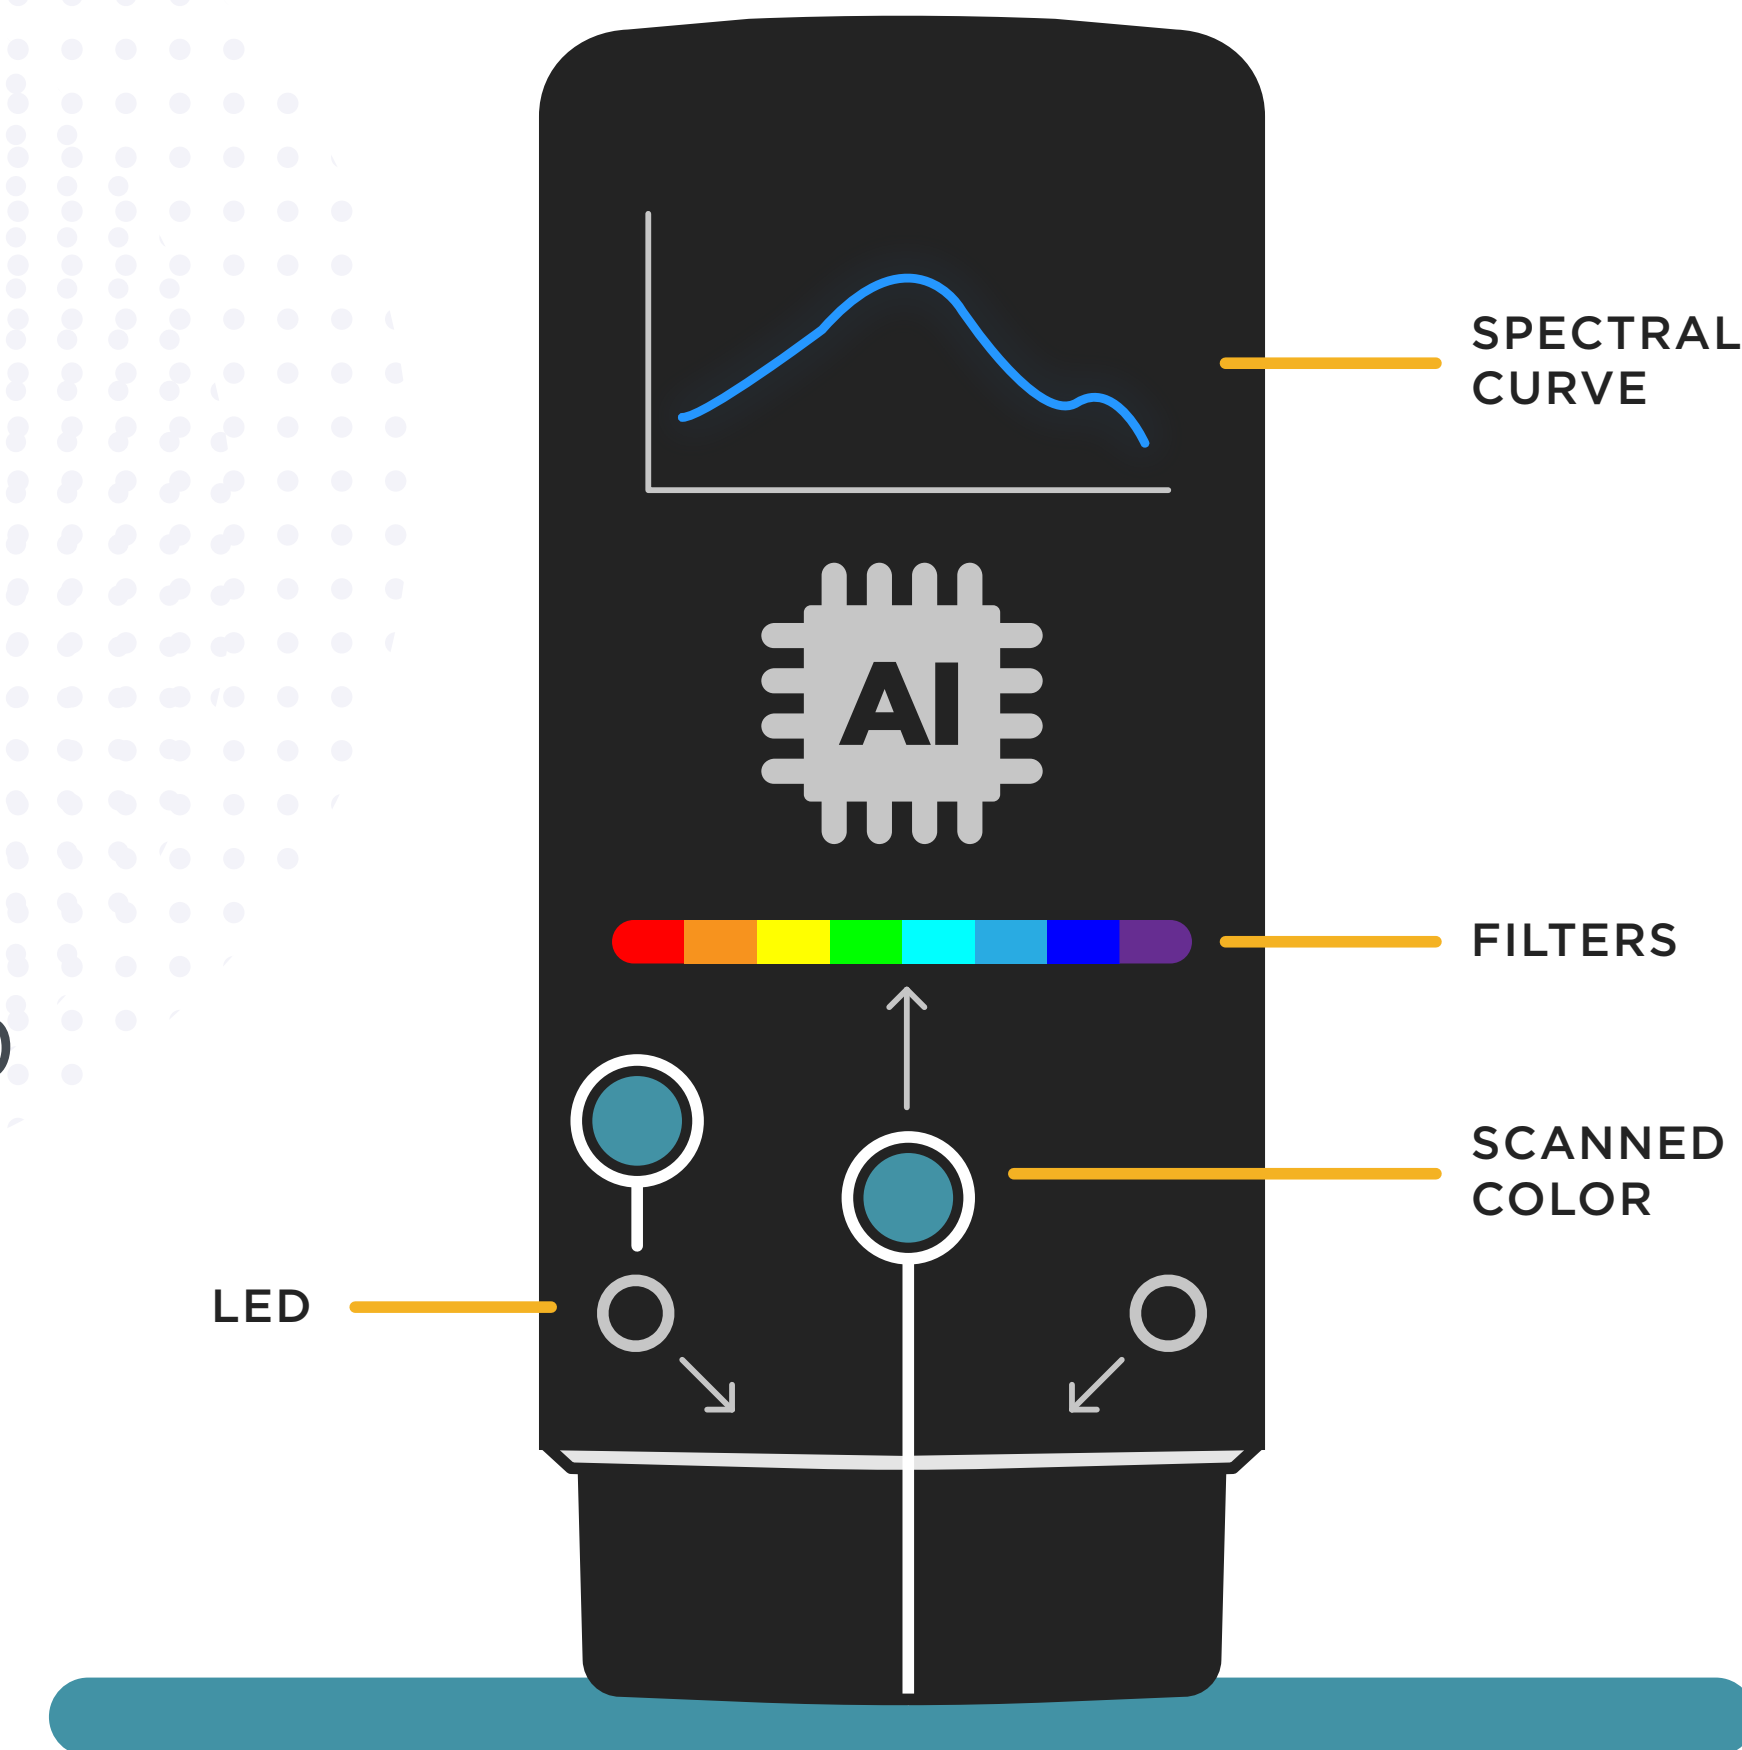

SPECTRO 1 COMPARISON					VARIABLE™
	Variable Spectro 1 Pro	X-Rite RM200QC	X-Rite i1Basic Pro 3 Plus	X-Rite Ci60	BYK spectro-guide gloss
Listed Price	\$299	\$1,978	\$2,295	\$5,180	\$8,882
Find Best Fan Deck Color	✓	✓	✓	✓	✓
Match Color Under Different Lighting Environment	✓	✓	✓	✓	✓
Creating and Referencing Digital Color Standards	✓	✓	✓	✓	✓
Wireless PC Connectivity	✓		✓		✓
Smartphone App Connectivity	✓	✓	✓		
Cloud Database/Account Management	✓				
Repeatability	0.05 dE	.1dE	0.1 dE	0.1 dE	0.01 dE
Inter-Instrument Agreement Average	0.2 dE	Not Listed	0.4 dE	0.4 dE	0.2 dE
CONFIDENTIAL					

Spectro 1 And Spectro 1 Pro





Flat Matte

High Gloss




Spectro 1 - Visual Color Appearance
(SPEX/SCE)



Spectro 1 Pro - True Color
(SPIN/SCI)



In-Store Solutions

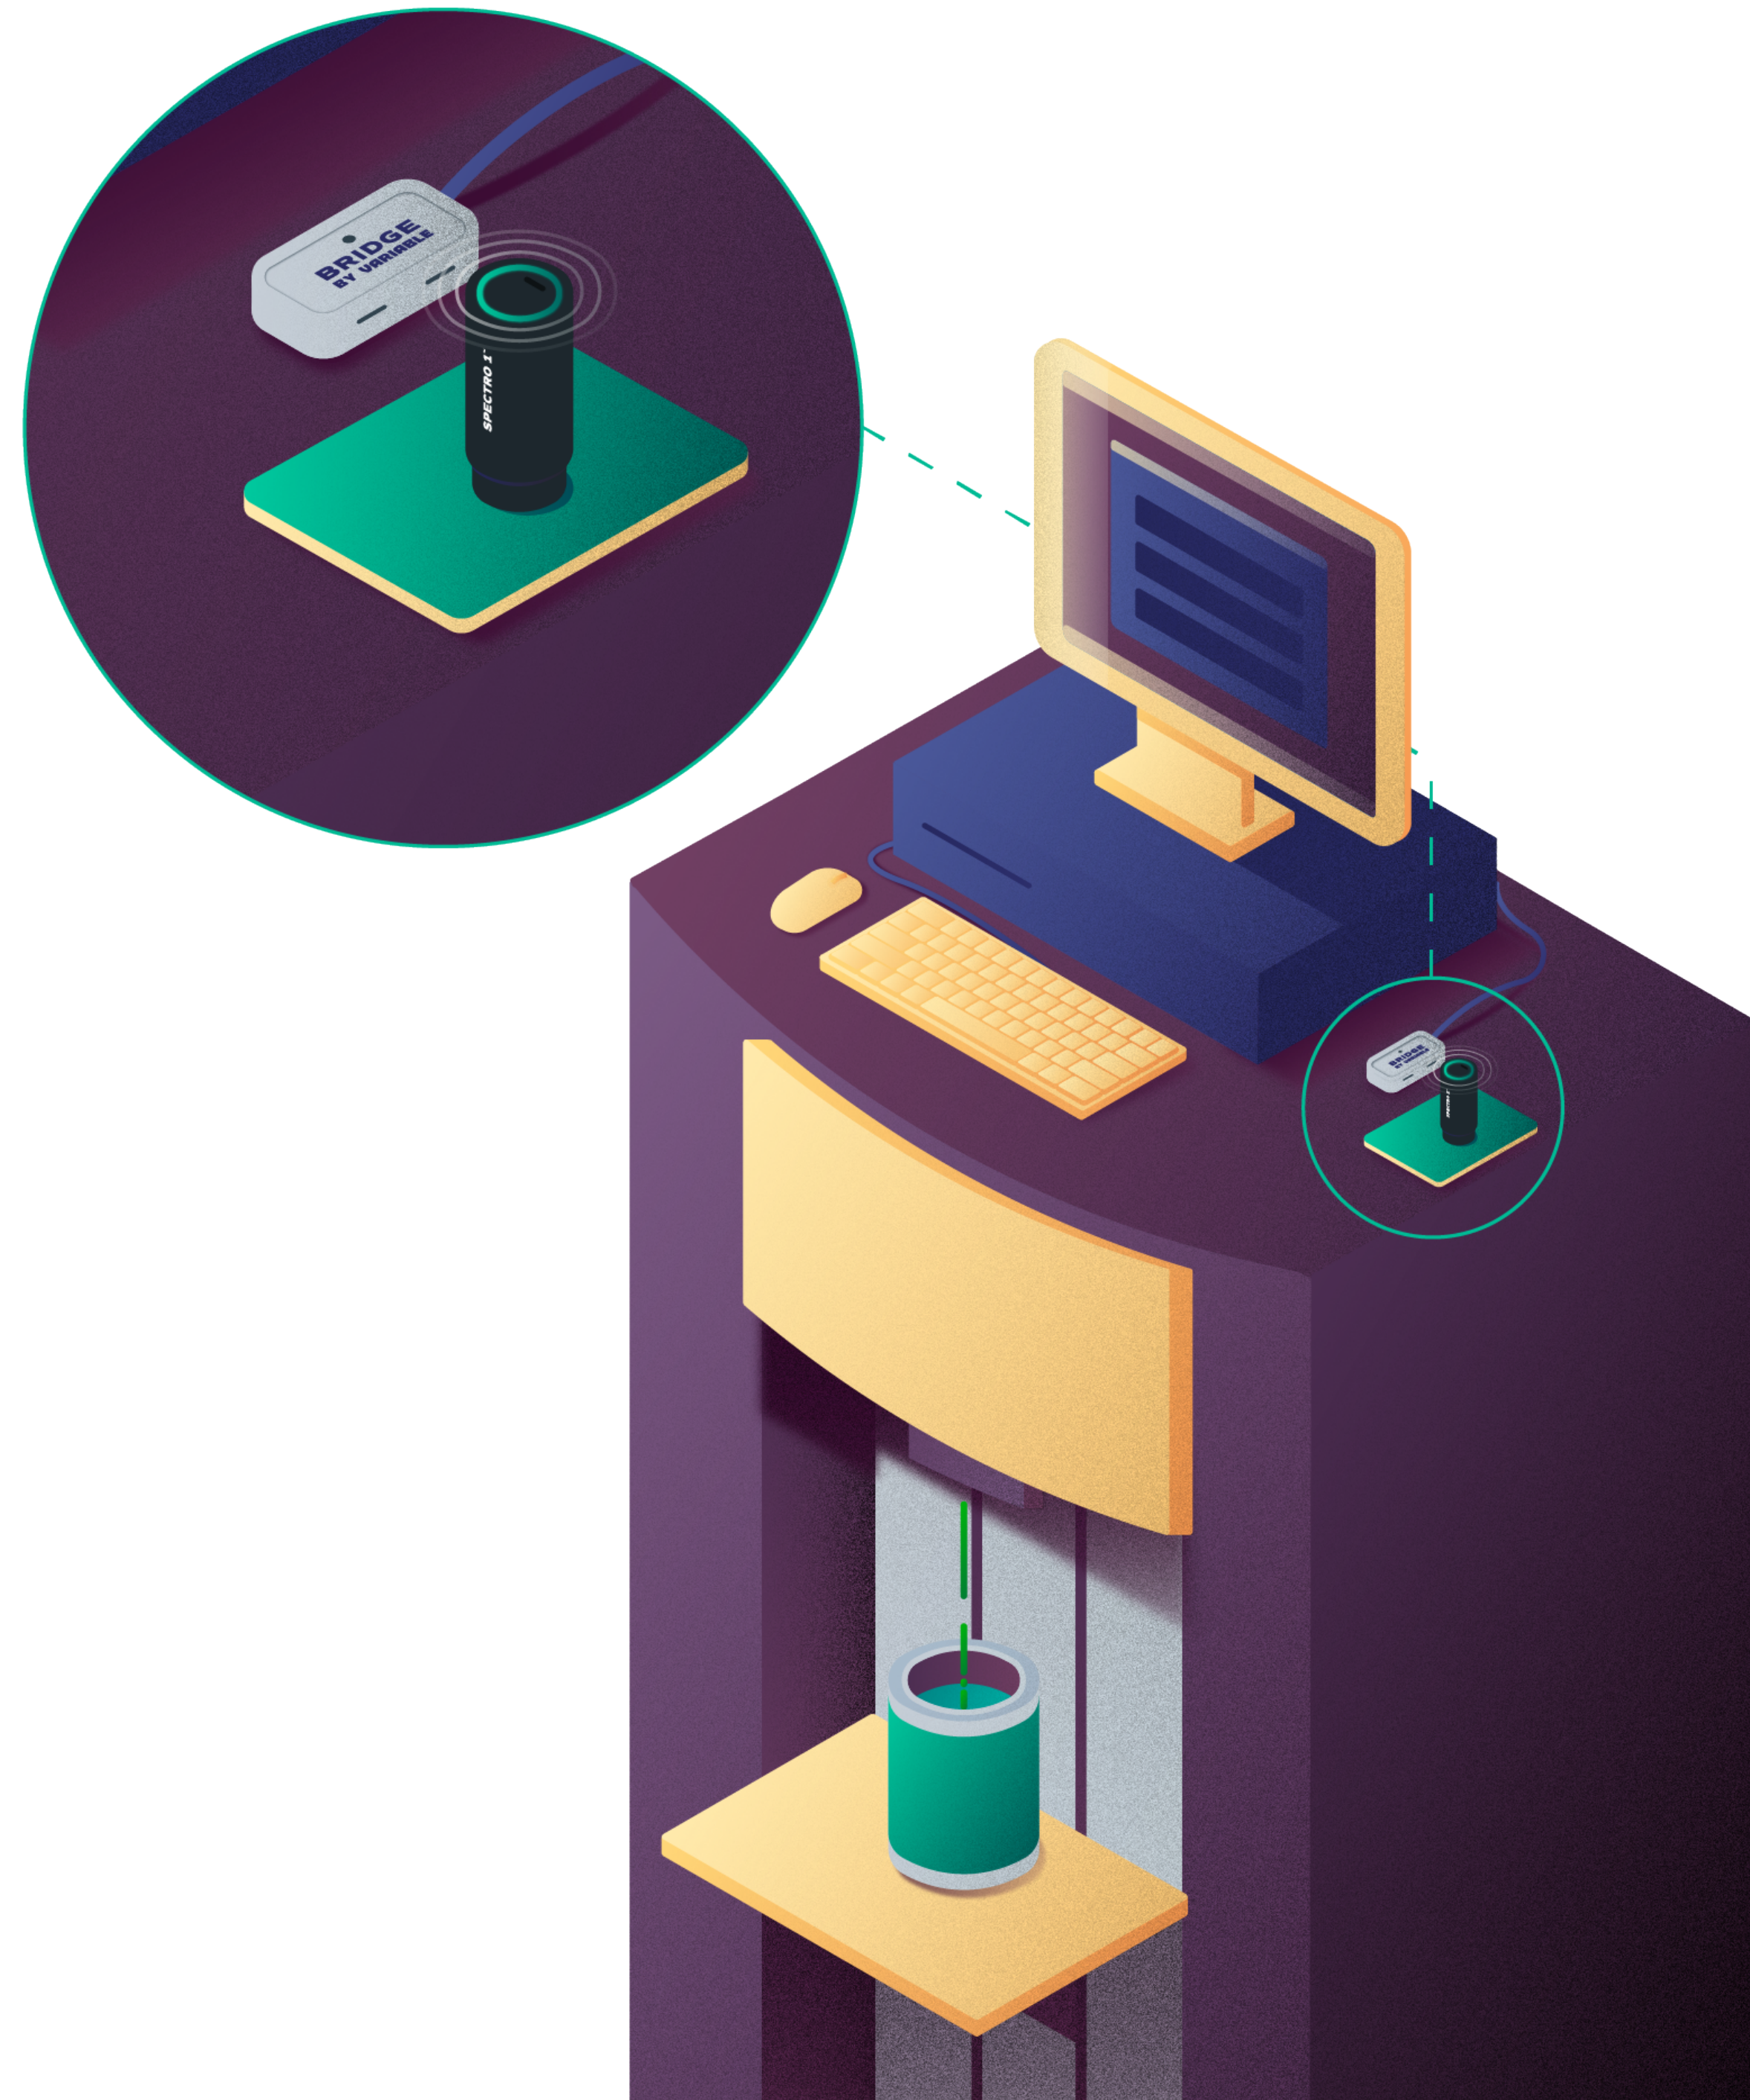

General Overview

- Allow organizations to leverage existing Tinting software with Variable Spectro 1 / Pro
- Reliable Bluetooth connection through external bluetooth dongle
- Reduction in total cost of ownership without sacrificing accuracy or stability
- Reduces technical knowledge requirement to operate a spectrophotometer
- Faster, more accurate color matching within tinting software
- Customization of accessories is available to fit different market demands



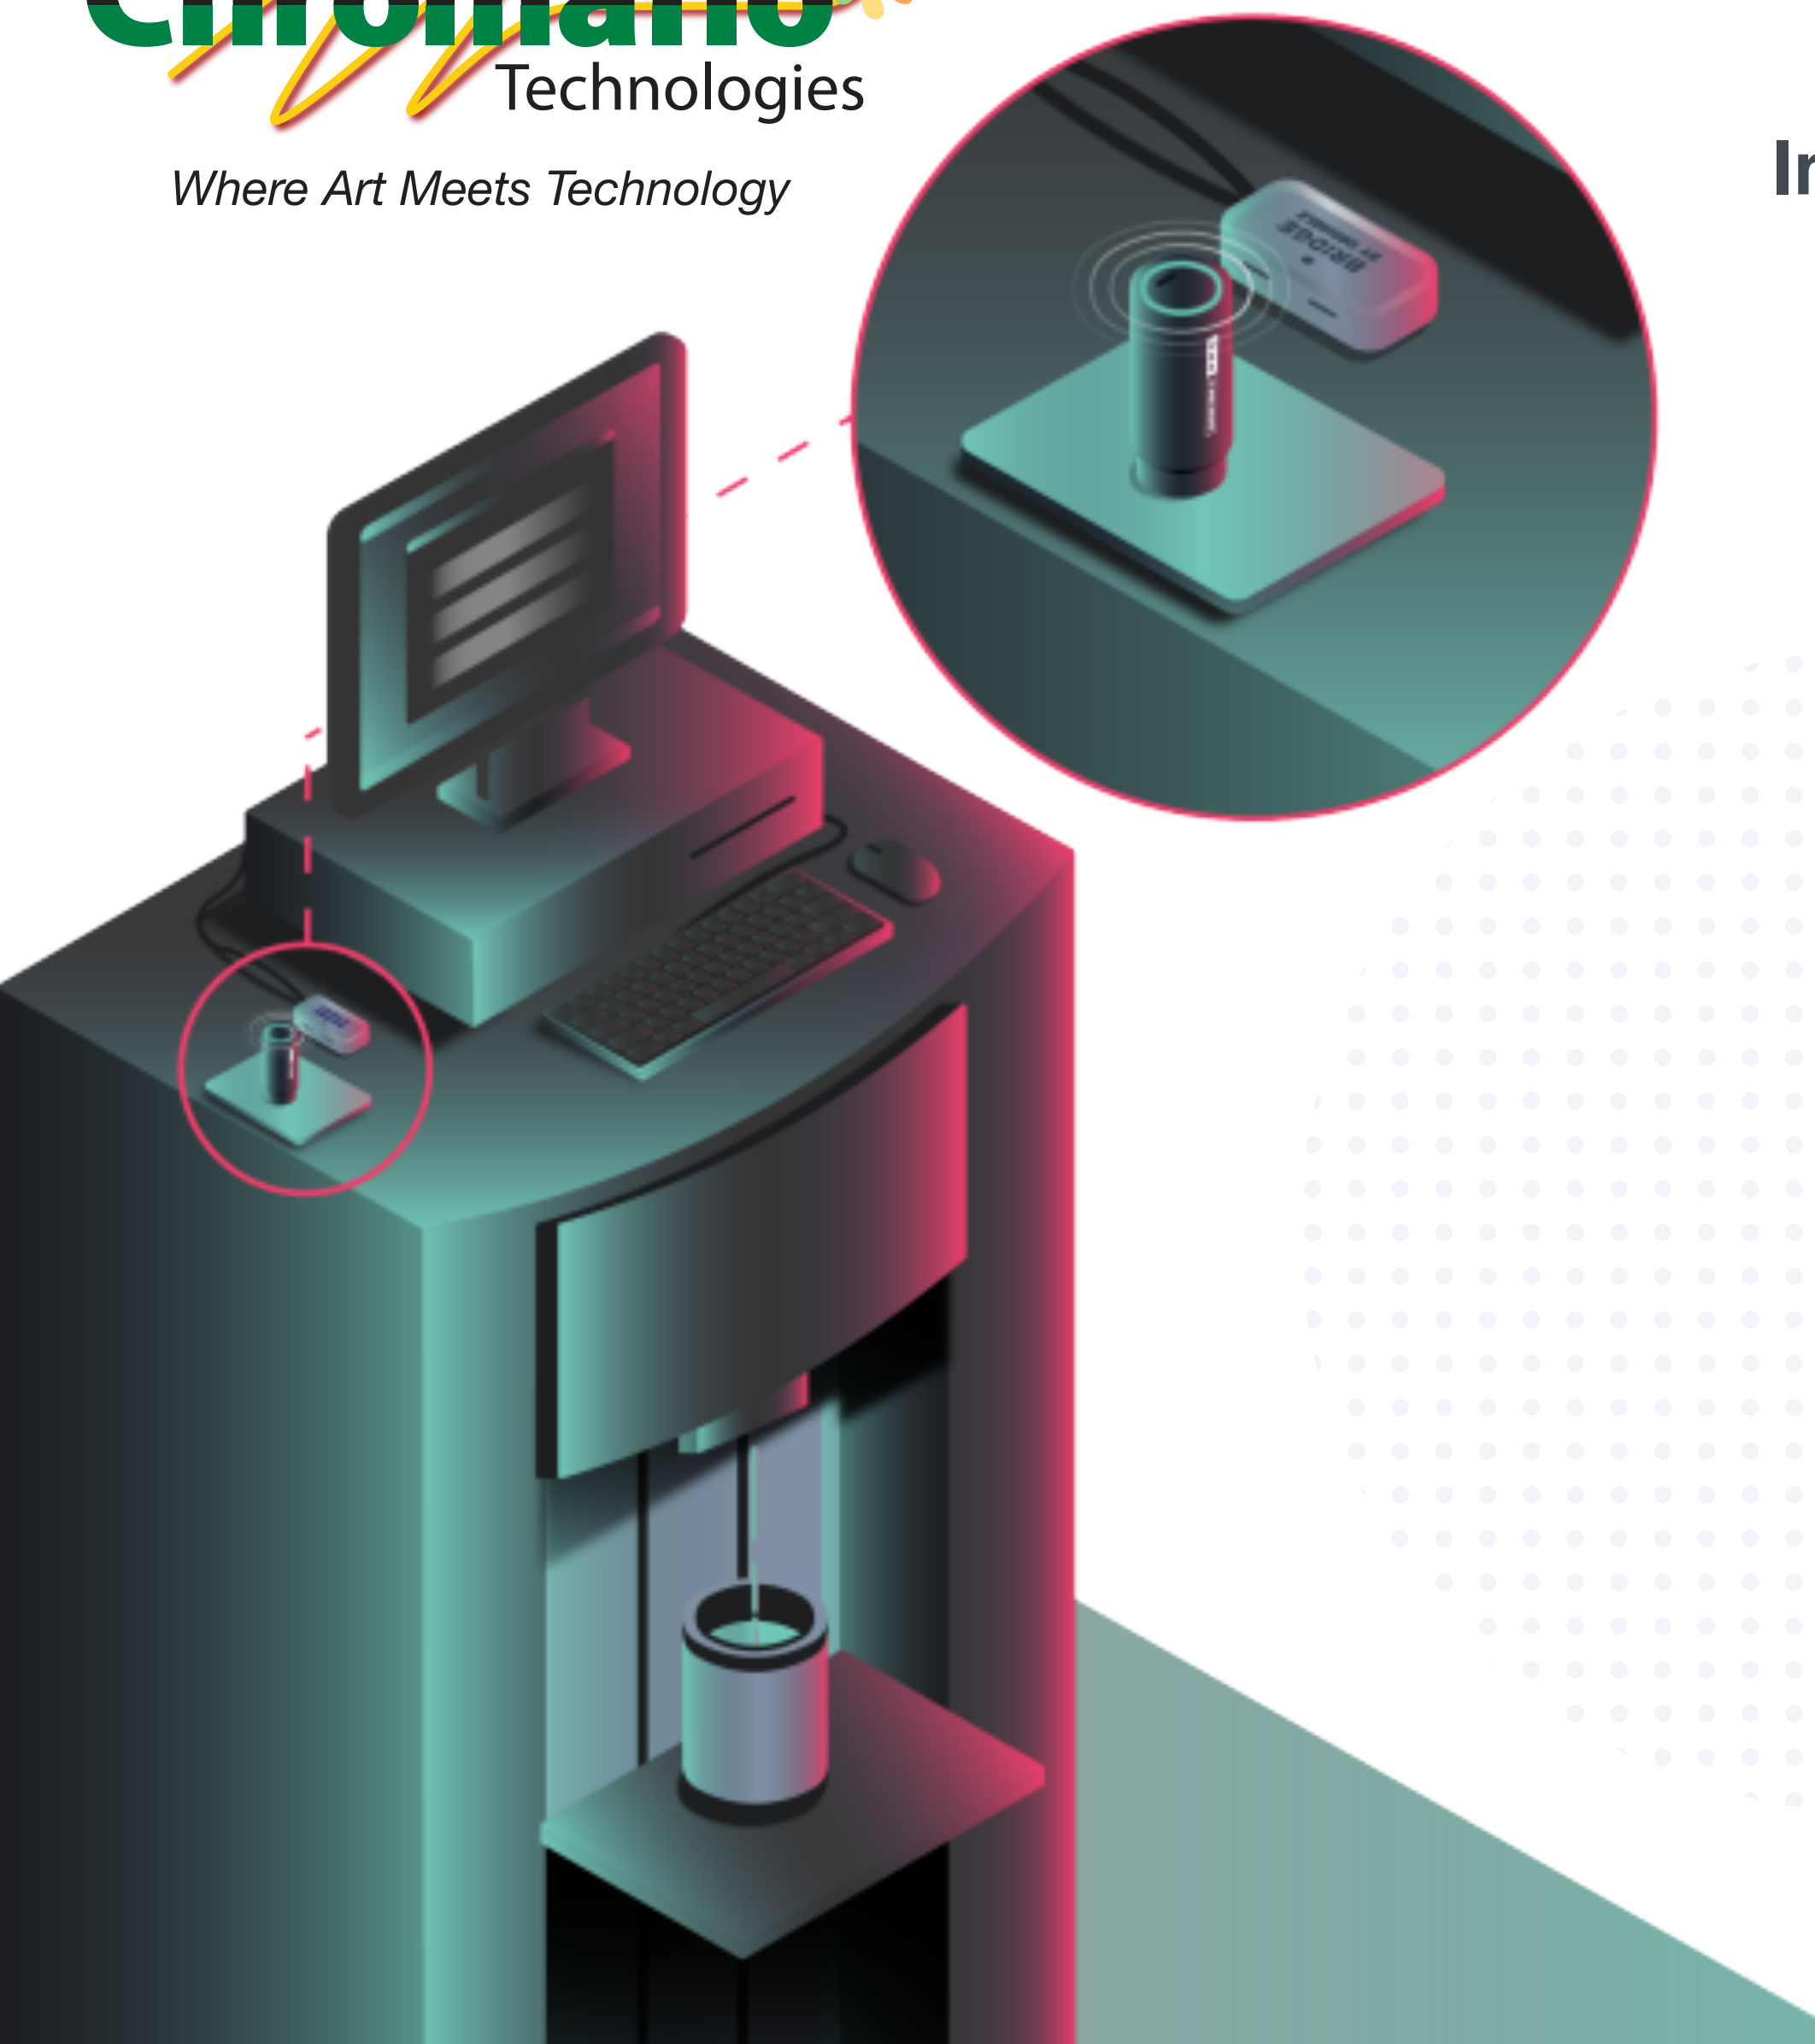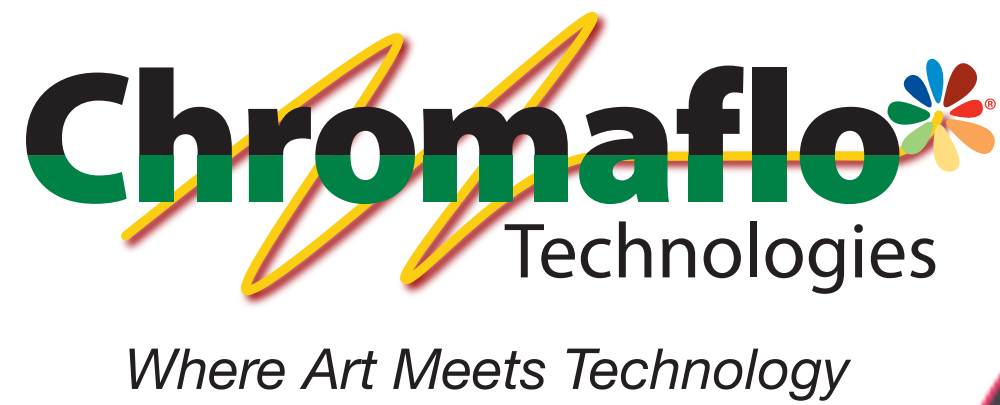

Innovatint Software integrates Spectro 1 Pro + Bridge Kit

- Chromaflo's Innovatint Tinting Software integrated Spectro 1 Pro into their PC software
- Closest match or custom formulation
- Variable built custom Bridge Kits support retail paint market — security cable, cradle for device, instructions, and more
- Bridge enables consistent bluetooth connection to legacy PC machines with unreliable connection.
- Innovatint users now have access to more affordable spectrophotometer

New Technology for Retail Paint Stores

- Enables stores who were previously tinting with human vision
- Affordable solution but maintains performance of traditional D:8° bench top spectrophotometers
- Easy to integrate through this [API Link](#)
- Simple design to allow minimal operator training



Base Kit

Includes



Spectro 1

Flash Drive with KPAG File

Bridge Device

Charging Cable

Calibration Tiles

Cleaning Cloth

Bridge Power Cable

Full Kit



Includes

- Spectro 1
- Flash Drive with KPAG File
- Bridge Device
- Charging Cable
- Calibration Tiles
- Cleaning Cloth
- Bridge Power Cable
- Security Ring & Wire
- Device Cradle
- Extra Screw for Ring
- Small Screwdriver (Not shown)